



NControl Security Integrations introduces the **Patient Elopement Protection System (PEPS)**.

The system uses the latest RFID technology to prevent patients from leaving their assigned areas without notifying facility personnel..

The system is ideal for:


- Hospitals
- Nurseries
- Extended Care Facilities

PEPS will sound and alarm at the door and notify personnel at the nursing station if a patient tries to leave through a covered exit door.

System Functions

- Notify personnel via workstation alarm if a patient is at exit door
- Local alarm at the door location
- Records alarms and reset activity
- Reports that display alarms by day, week or month
- Text or Email if alarms occur
- Monitor door access and preventing unauthorized exit

NEAT PEPS Patient Elopement Protection System

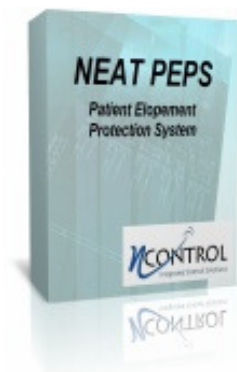

NControl is pleased to offer a new concept in Patient Elopement Systems, **NEAT PEPS**. The system is designed to monitor facility exit points and notify personnel if patients are in the door area. The system monitors patient activity at the facility exit points and if a Patient is 'seen' an alarm will sound at the door and on the **NEAT PEPS** workstation.

The **NEAT PEPS** combines the latest RFID and Access Control technologies to offer a cost-effective system to monitor patient access. The system uses a wireless hardware design, making the system easy to install (most installations can be done by facility maintenance personnel). All **PEPS** systems are pre-configured for the installation and come ready to use out of the box. Users simply add the patient information; attach the wristwatch styled RFID tag to the patient and it's ready to go!

NEAT PEPS is designed to two facility exit points, but can be expanded if required. Each door will have a local alarm that sounds if a patient tries to exit through the door. If exit is attempted, the system will display the alarm on the workstation (normally located at the nursing station, and the alarm will be activated at the door. Upon alarm activation, authorized personnel can investigate the alarm and reset the device using their assigned system reset card.

All alarm activity (including personnel reset) can be access using the web-based **NEAT PEPS** reporting application. This application uses password protection to prevent unauthorized access and can be access by any users on the systems local area network.

NEAT PEPS reports include:

- Today's Alarms
- Alarms for the week
- Alarms for the month
- Alarms by Patient

NEAT PEPS has other options that can be added to enhance the system. These options include:

Time of Day Schedules – Users can define when alarms will occur based on the time of day. Perfect for facilities where patients can exit the facility during certain times, but require notification during others. This option can be set system wide or by individual door.

Email or Text Notification – When alarms occur, the system can send emails or text to defined personnel in addition to the other alarms. This option is ideal for facilities with unstaffed nursing stations or during evening hours.

Video Display – In addition to alarms, the **NEAT PEPS** system can display real-time video of the door location, so workstation users can view activity at the door as alarms occur. **NEAT PEPS** can also be integrated with a number of Video Surveillance systems.

For additional information on **NEAT PEPS** please contact **NControl Security Integrations, LLC** at either sales@ncontrolsecurity.com or via telephone at (219) 285-0141.